



CONNECTION PLATES		
FRAME LINE A		
ID	QUAN	MARK/PART
5	4	JC

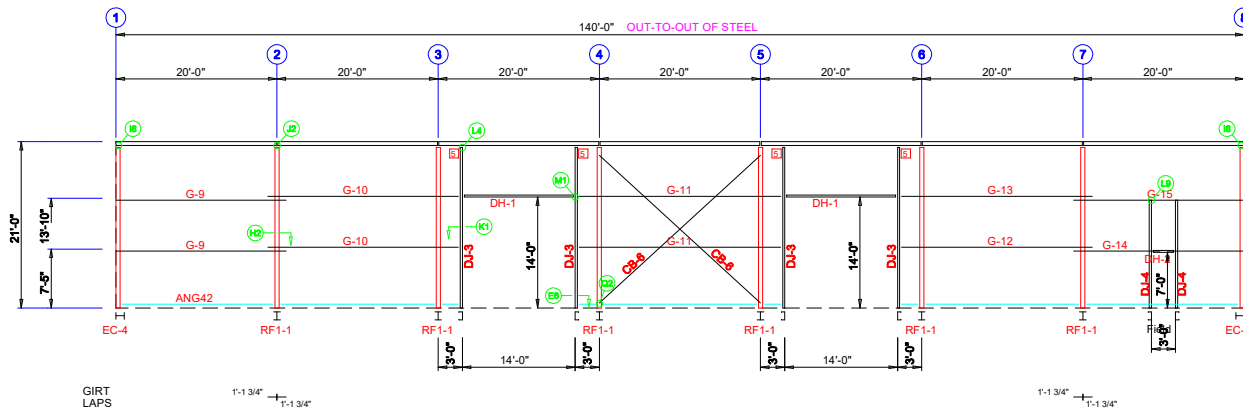

SIDEWALL FRAMING: FRAME LINE A

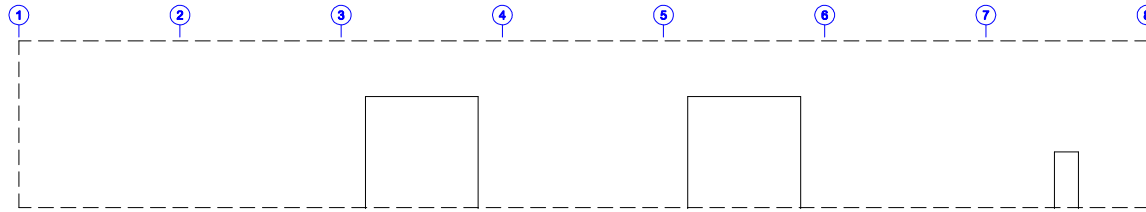

SIDEWALL SHEETING & TRIM: FRAME LINE A

DRAWING IS NOT TO SCALE

TRIM COLORS	
EAVE TRIM = TBD	CORNER TRIM = TBD
BASE TRIM = TBD	GUTTER =
DOOR TRIM = TBD	DOWNSPOUTS =
RAKE TRIM = TBD	
* LINER TRIM = Liner panel color	
* SOFFIT TRIM = Soffit panel color	

* ONLY APPLICABLE IF LINER TRIM OR SOFFIT PANEL IS INDICATED ON BUILDING ORDER.

GENERAL NOTES:

1. Use TEK5WW screws in place of SD150 panel screws at all 10 gage members.
2. All connections to door or window jambs where the clip is not designated in the clip table / drawing are made with JC# clips. (#= Girt Depth).


F.O. 121428

DRAWING STATUS		REV.	DESCRIPTION	DATE
<input type="checkbox"/>	FOR PERMIT			
<input type="checkbox"/>	FOR CONSTRUCTION			


FOR PERMIT: THESE DRAWINGS, BEING FOR PERMIT, ARE BY DEFINITION NOT FINAL. ONLY DRAWINGS ISSUED FOR CONSTRUCTION CAN BE CONSIDERED AS COMPLETE.

FOR CONSTRUCTION: THESE DRAWINGS, BEING FOR CONSTRUCTION, ARE BY DEFINITION NOT FINAL. ONLY DRAWINGS ISSUED FOR CONSTRUCTION CAN BE CONSIDERED AS COMPLETE.

50'-0" x 140'-0" x 21'-0"
 DATE: 8/6/24 REVISION: 0
 ENG: DWN: APPD:

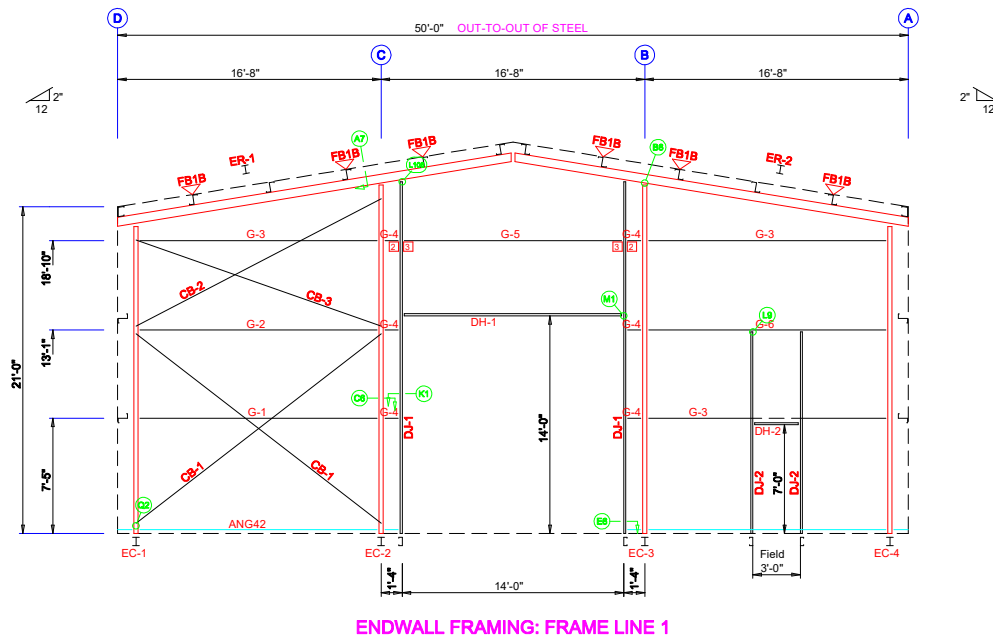

ENDWALL FRAMING: FRAME LINE 1

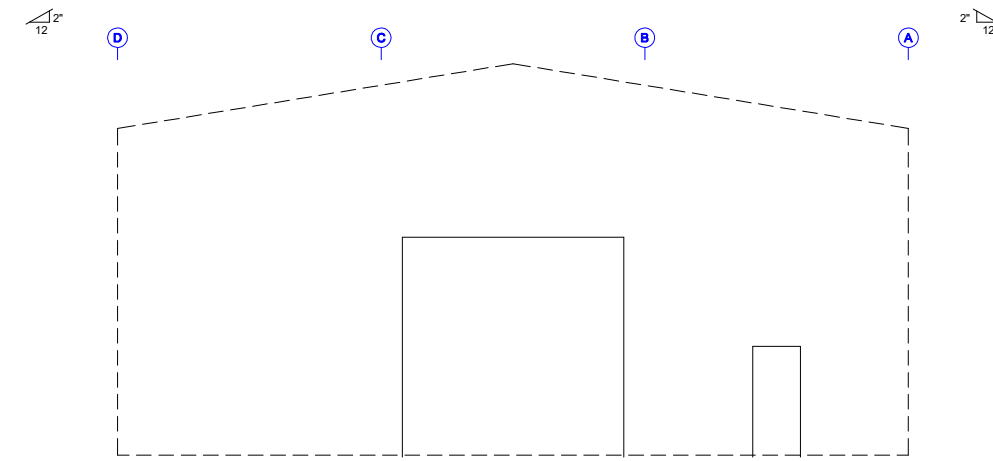

ENDWALL SHEETING & TRIM: FRAME LINE 1

BOLT TABLE FRAME LINE 1				
LOCATION	QUAN	TYPE	DIA	LENGTH
ER-1/ER-2	8	A325	1/2"	1 1/2"
Columns/Raf	2	A325	3/4"	1 3/4"
Jamb	2	A325	1/2"	1 1/4"

CONNECTION PLATES FRAME LINE 1		
ID	QUAN	MARK/PART
2	2	CFFG5.5
3	2	CFFG2

FLANGE BRACE TABLE FRAME LINE 1		
ID	MARK	LENGTH
1	FB1B	1'-2 3/8"

F.O. 121428

CITY:	ST./PK:	REVISION HISTORY	
		REV.	DATE

DRAWING STATUS

FOR PERMIT: THESE DRAWINGS, BEING FOR PERMIT, ARE BY DEFINITION NOT FINAL. ONLY DRAWINGS ISSUED FOR CONSTRUCTION CAN BE CONSIDERED AS COMPLETE.

FOR CONSTRUCTION: THESE DRAWINGS, BEING FOR CONSTRUCTION, CAN BE CONSIDERED AS COMPLETE.

FOR FINAL DRAWINGS: THESE DRAWINGS, BEING FOR FINAL DRAWINGS, CAN BE CONSIDERED AS COMPLETE.

DRAWING IS NOT TO SCALE

TRIM COLORS	
EAVE TRIM = TBD	CORNER TRIM = TBD
BASE TRIM = TBD	GUTTER =
DOOR TRIM = TBD	DOWNSPOUTS =
RAKE TRIM = TBD	
* LINER TRIM = Liner panel color	
* SOFFIT TRIM = Soffit panel color	

* ONLY APPLICABLE IF LINER TRIM OR SOFFIT PANEL IS INDICATED ON BUILDING ORDER.

- GENERAL NOTES:**
1. Use TEK5WW screws in place of SD150 panel screws at all 10 gage members.
 2. See detail C7A for field coping of coldform endwall column flange braces.
 3. All connections to door or window jambs where the clip is not designated in the clip table / drawing are made with JC# clips (#= Girt Depth).

50'-0" x 140'-0" x 21'-0"
DATE: 8/6/24 REVISION: 0
ENG: DWN: APPD: